


[<- Back](#)[Forward ->](#)

Document ID# 1826597  
2007 Saturn SKY

[Feedback](#)[Print](#)

# Engine Oil and Oil Filter Replacement

## [Removal Procedure](#)

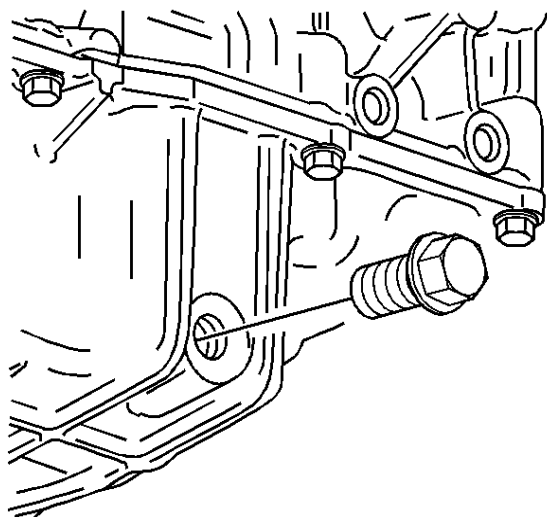


1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Place a drain pan under the oil drain plug.
3. Remove the oil pan drain plug.
4. Allow the oil to drain completely.

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.

5. Install the oil pan drain plug.


### **Tighten**

Tighten the plug to 25 N·m (18 lb ft).

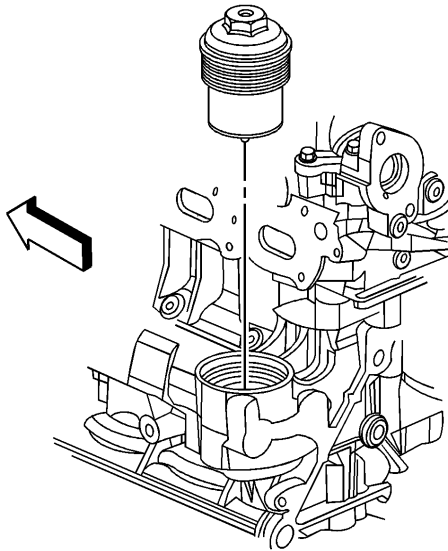


**Important:** DO NOT use an open end wrench on the hex on top of the oil filter cap.

6. Use a 32 mm (1 1/4 in) socket on the hex on top of the oil filter cap, or an oil filter wrench on the outside diameter of the oil filter cap.
7. Remove the oil filter cap and filter.

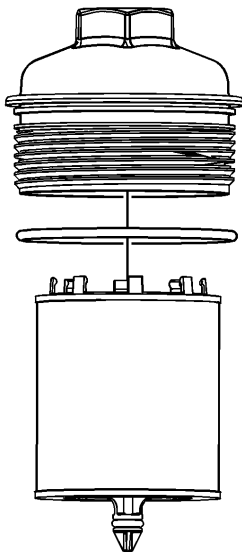


8. Remove the oil filter from the oil filter cap.
9. Inspect the oil filter cap O-ring seal for damage, replace as necessary.

## **Installation Procedure**

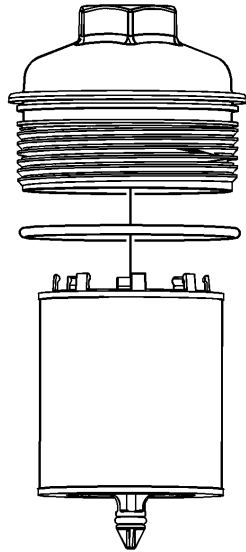

1. Install a NEW oil filter to the oil filter cap.

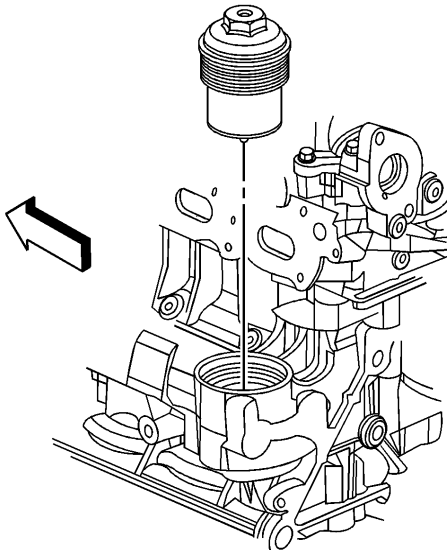

2. Install the oil filter cap and filter.

**Notice:** Over torquing the oil filter cap may cause damage to the oil filter cap resulting in an oil leak.

**Important:** DO NOT use an open end wrench on the hex on top of the oil filter cap.

3. Use a 32 mm (1 1/4 in) socket on the hex on the top of the oil filter cap, or an oil

filter wrench on the outside diameter of the oil filter cap .

**Tighten**

Tighten the oil filter cap until fully seated. DO NOT exceed 25 N·m (18 lb ft).

4. Lower the vehicle.
5. Fill the engine with oil. Refer to [Fluid and Lubricant Recommendations](#) .

---

**Document ID# 1826597**  
**2007 Saturn SKY**